CleanCat

Washing Hands Save Lives



1. Product Features


- > Sleek and modern design, excellent sound quality.
- > Adjustable volume level, low or high.
- > Infrared proximity sensor within 12 feet.
- > 3 x AA batteries.
- \triangleright Built-in 8Ω1 watt speaker.
- Pre-programmed tunes and messages based on neuroscience.

2. Electrical Parameters

Power supply mode	3 x AA Batteries		
Working Current	Sleep standby mode		≤100uA
	Playing mode		≤130mA(DC4.7V)
Audio Format	MP3		
Audio Output Power	8Ω/1W(typical value)		
Infrared Induction Range	≤12 feet(120°Angle)		

3. Appearance introduction

This product is easy to use. Just plug and play. This device doesn't connect to the cloud.

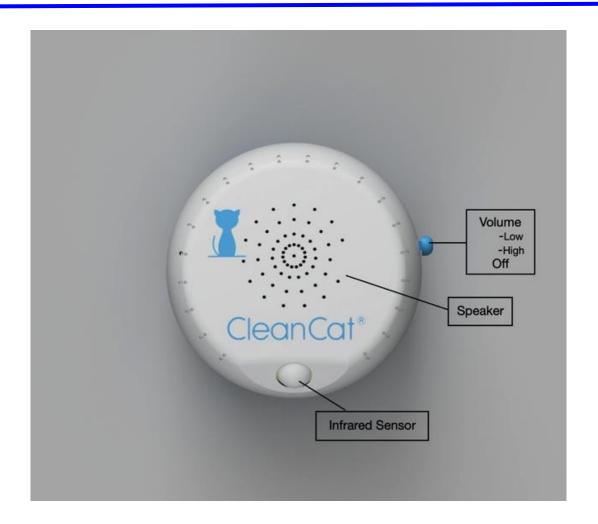

	Down	Switch off
Slide Switch	Middle	Low volume
	Up	High volume

★Note:

- 1. When switched on, wait about 30 S, then it can work normally within 12 feet.
- 2. Each time, after triggering to play voice, you need to wait 30 S, then it can trigger again to play voice.
- 3. Each time, after triggering, go out of the induction range and enter the range again, then it can have a better effect of the next trigger.
- 4. In B mode, you only need to short press key A or B to select audition of the triggering voice, need no other operations.
- 5. Key function is only valid during the process of voice playing. If no voice play, it's invalid to press key.
- 6. If plug in the power, please remember to remove the batteries to avoid unexpected accidents.

Induction distance too short?

Reason 1: Low battery (you can use regular alkaline batteries)

Reason 2: Environment temperature too high, influences its induction distance.

Reason 3: After playing a section voice, there will be 3 seconds interval. Wait 3s, then it can trigger and play.

Reason 4: When testing, if parallel with infrared ray, it will be unable to trigger effectively. You should walk form the left of device to the right, forming a cross with infrared ray, then it can trigger.

Normal induction distance is 0-3 meters. If the temperature is high, induction distance is about 2 meters. If there is electric fan or air conditioner blowing, influence on the temperature of induction area, it can trigger to play voice.

So you'd better to choose the environment to test where there is no electric fan or air conditioner blowing.

4. Installation

Wall mounted

About 1.5 meters above the ground is the best. About 1 meter far from the door-frame. Use the mounting holder to fix the device, toward the door, 45°(see picture).

The ideal location for this device is wall facing the bathroom or the kitchen sink.

Disclaimer

Saysaban LLC reserves the right to modify the use of materials without notifying customers. The new product specifications will be subject to the latest version of the usage data.

Contact Us

Saysaban LLC

Tel: + 1 202 631-7174

Website: http://www.thecleancat.com

E-mail: info@thecleancat.com